



HAYWARD®

092004 RevA

AQR100

Replacement PCB for AQR100

Installation Manual

Contents

Description.....1

Installation.....1

GLXAQR100PCB

Hayward Pool Products
620 Division Street, Elizabeth NJ 07207
Phone (908)-355-7995
www.hayward.com



HAYWARD®


Description

The GLXAQR100PCB is a replacement printed circuit board (PCB) for the AQR100 chlorine generator only.


Installation

DANGER of Death, Injury or Property Damage if procedure not followed. This component connects to the main circuit and chlorinator cell inside of the AQR100 enclosure. Separating the enclosure is required. Power to the AQR100 **MUST** be shut off before the enclosure is separated.

1. Completely remove power to the AQR100.
2. Remove the AQR100 from the mounted surface.
3. Remove the 10 stainless steel screws from the back of the AQR100.

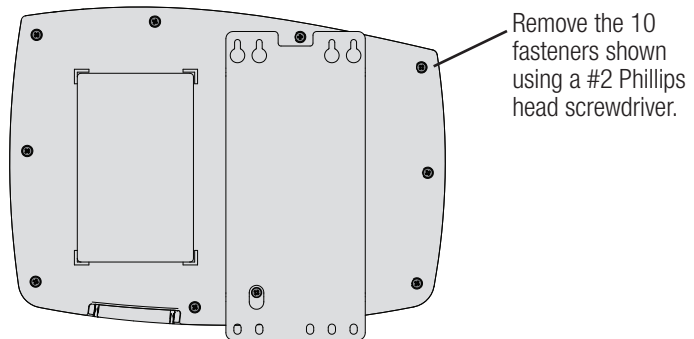

4. As you carefully separate the enclosure, reach in and remove the ribbon cable connector. After the cable has been disconnected, remove the front half of the enclosure and put it aside.

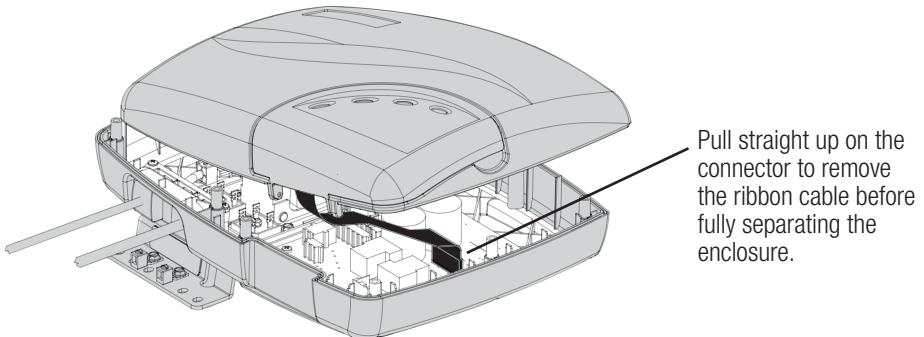




HAYWARD®

5. Looking down into the enclosure. Locate and remove the two connectors from the PCB as shown.


Separate this connector by pinching the two outer tabs and pulling up.

Separate this connector by pushing down on the top lever and pulling apart.

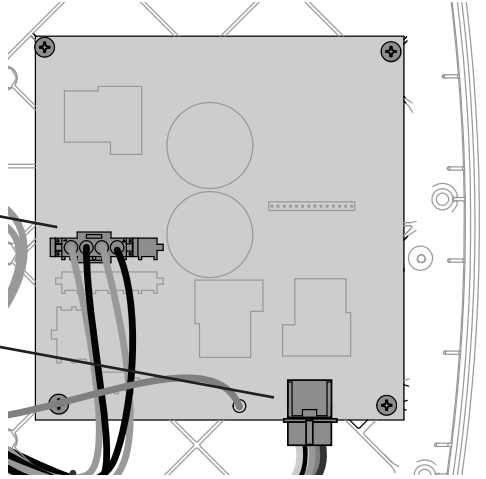

6. There is a green wire that is connected to the PCB as shown below. Pull up on this wire to disconnect it.

Pull straight up to remove the green conductor.

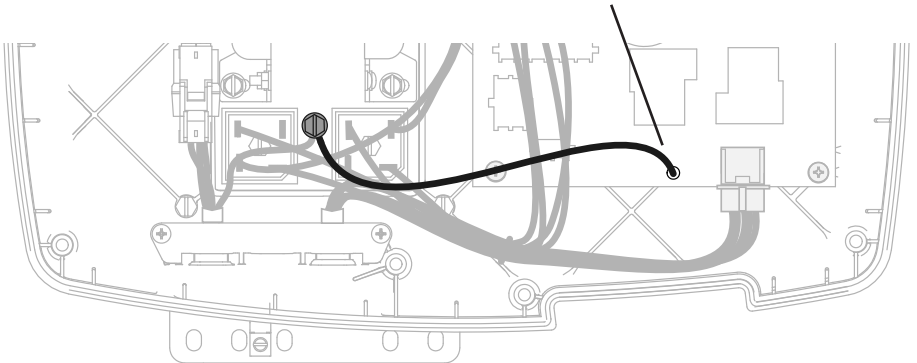

7. You can now remove the 4 Phillips head screws that fasten the PCB to the enclosure and then remove the PCB.
8. To install the new PCB, reverse the previous steps.

For further information or consumer
technical support, visit our website at
www.hayward.com



Hayward is a registered trademark and AQR100 is
a trademark of Hayward Industries, Inc. © 2019 Hayward Industries, Inc.

All other trademarks not owned by Hayward are the property of their respective owners.
Hayward is not in any way affiliated with or endorsed by those third parties.

USE ONLY HAYWARD GENUINE REPLACEMENT PARTS