 




# Salt & Swim™ Cell O-Ring

GLX-DIY-ORING

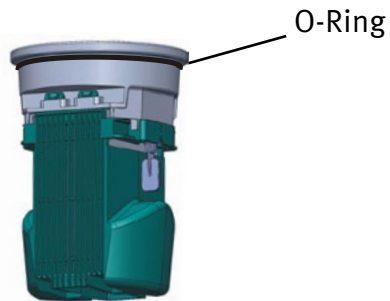

## Installation

 
1. Remove power to the filter pump. If using a pump timer, be sure that the timer won't turn on the pump during this installation.
2. Unplug the Salt & Swim Control Box.
3. Remove the Cell:
  - a) Remove the Retaining Nut from the Cell Vessel.
  - b) Unplug the Cell Cap from the Cell.
  - c) Remove the Cell from the Cell Vessel.
4. Remove the old O-Ring from Cell.
5. Install new O-Ring as shown above.
4. Reinstall the Cell:
  - a) Slide the Cell back into the Cell Vessel.
  - b) Plug in the Cell Cap.
  - c) Hand tighten the Retaining Nut.
5. Run the pump for 5 minutes or until air is out of the system. Check for leaks.
6. Plug in Salt & Swim Control Box and resume normal operation.

Hayward Pool Products  
620 Division Street, Elizabeth NJ 07207  
[www.hayward.com](http://www.hayward.com)



# Salt & Swim™ Cell O-Ring

GLX-DIY-ORING

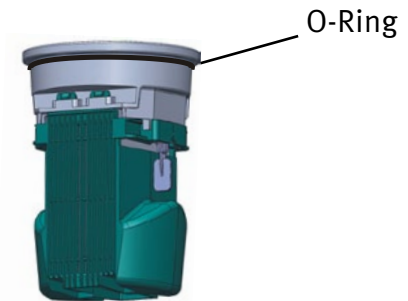

## Installation

1. Remove power to the filter pump. If using a pump timer, be sure that the timer won't turn on the pump during this installation.
2. Unplug the Salt & Swim Control Box.
3. Remove the Cell:
  - a) Remove the Retaining Nut from the Cell Vessel.
  - b) Unplug the Cell Cap from the Cell.
  - c) Remove the Cell from the Cell Vessel.
4. Remove the old O-Ring from Cell.
5. Install new O-Ring as shown above.
4. Reinstall the Cell:
  - a) Slide the Cell back into the Cell Vessel.
  - b) Plug in the Cell Cap.
  - c) Hand tighten the Retaining Nut.
5. Run the pump for 5 minutes or until air is out of the system. Check for leaks.
6. Plug in Salt & Swim Control Box and resume normal operation.

Hayward Pool Products  
620 Division Street, Elizabeth NJ 07207  
[www.hayward.com](http://www.hayward.com)