



GLX-HYDFUSE

Replacement Fuse

Step 1

IMPORTANT: To Prevent Electrical Shock, Make Sure All Power Sources Are Disconnected From The Unit Before Starting!


Remove Front Panel by removing the two screws using a 5/16 nut driver.



Step 2

Using a pair of fuse pullers, pull out the old fuse from the main board.

If you do not have fuse pullers, carefully pry one corner of the fuse up using a small screwdriver as shown in the picture.

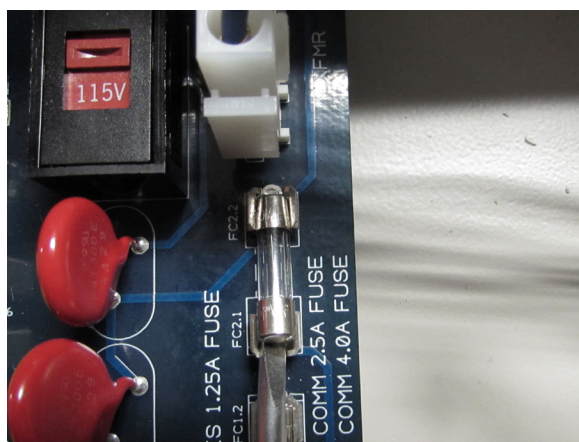

Step 3


Remove the old fuse from the enclosure. Unbox the new GLX-HYDFUSE replacement fuse.





Step 4

Place the new fuse onto the main board as shown.

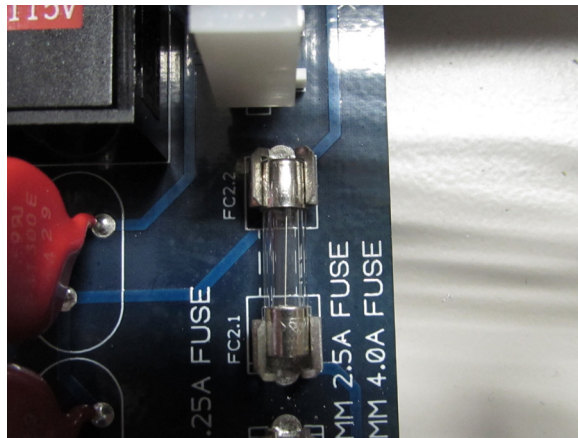

Step 5

Replace the front panel using the two screws that were previously remove.

Installation is now complete. It is safe to restore power to the system.



Hayward Pool Products
620 Division Street, Elizabeth NJ 07207
Phone (908)-355-7995
www.hayward.com